


JK 16S Inverter BMS Connection Diagram

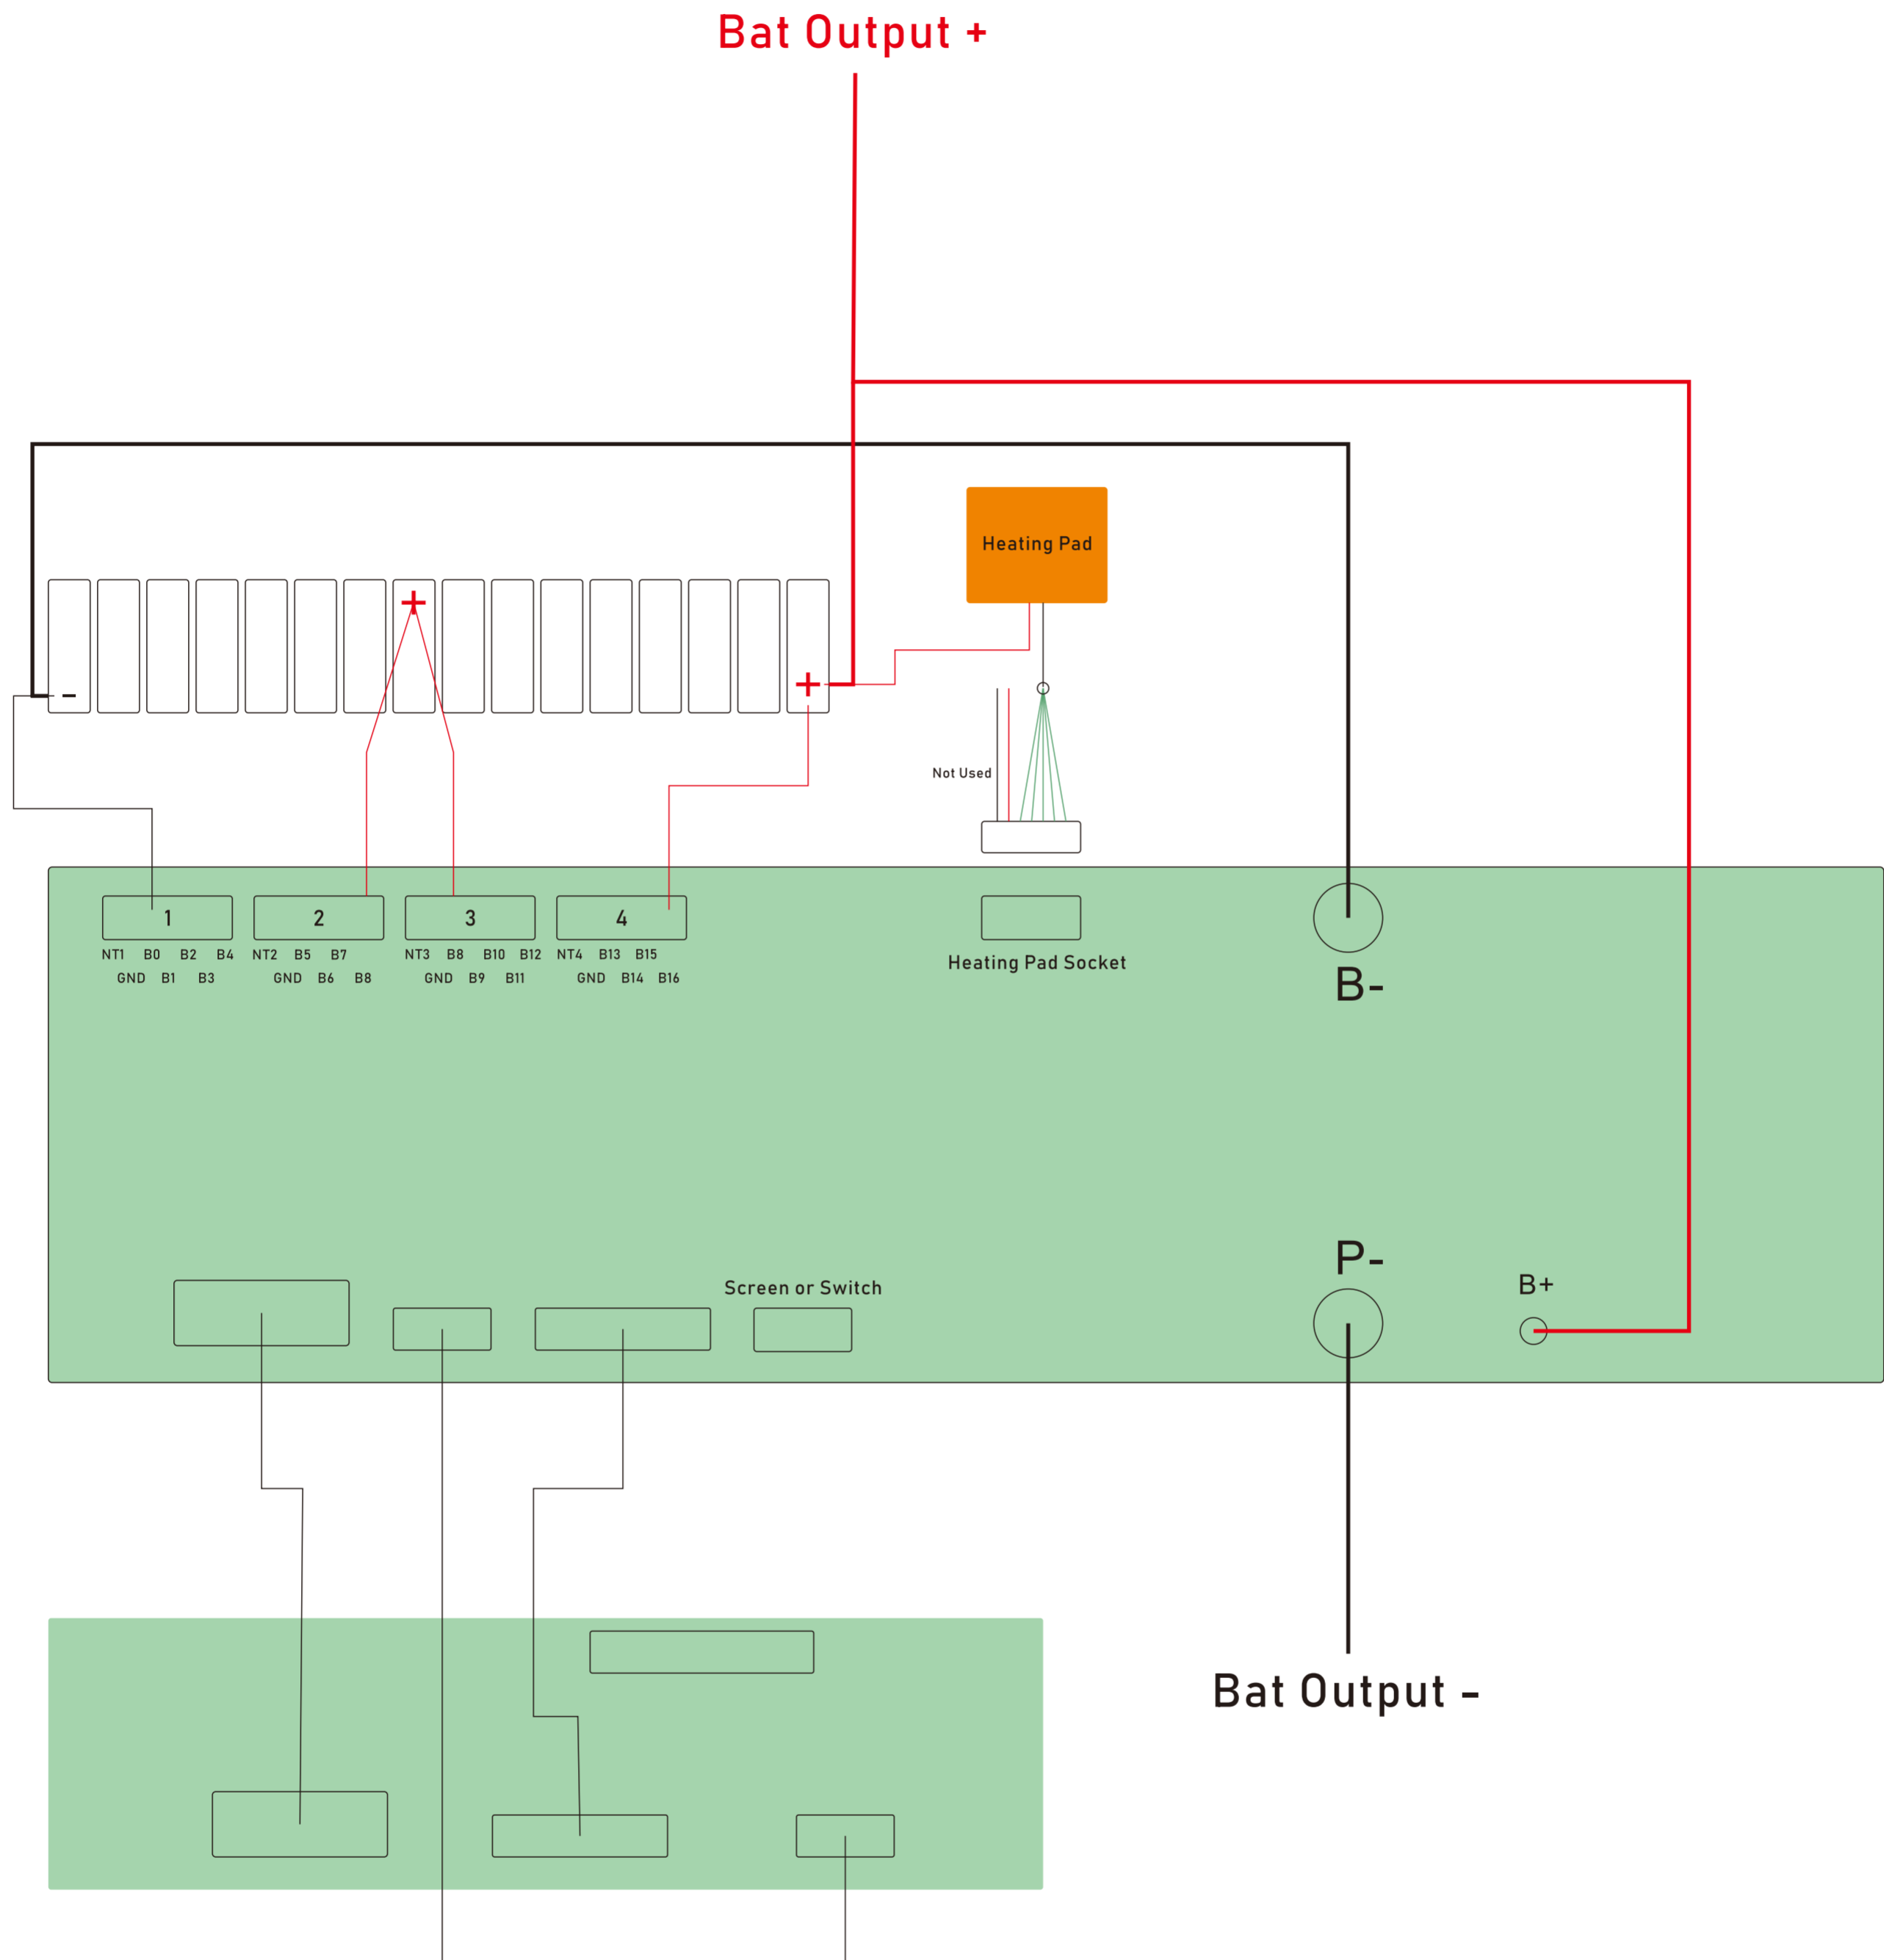

Assemble:

1. Connect B-, P-, B+
2. Connect balance leads in the order of 1, 2, 3,4

Disassemble:

1. Disconnect B-, P-, B+
2. Disconnect balance leads in the order of 4, 3, 2, 1